

PixterTM
Software

Learning Fun 2TM



Fisher-Price

Owner's Manual

Model Number: 73654



 


Let's Go!

Before inserting a software cartridge, turn power off! Insert the software cartridge into the software port. Turn power back on.

**Learning Fun™ 2
Software Cartridge**

Software Port

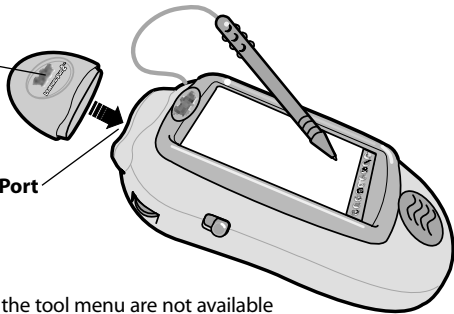

- Some of the tools on the tool menu are not available for use during some activities or games. If a tool is not available for use, you will hear a tone. The Home (🏠) and the Save It (and Volume Control) (🔊) tools are always available for use.
- Please keep this manual for future reference, as it contains important information.

IMPORTANT! If the tip of the stylus and the image on screen do not align, it's time to calibrate them! Please refer to page 35, Calibrating the Stylus



Learning Fun™!

Choose an activity or game from the Home Screen: **Which Word?**, **Addition & Subtraction**, **Weather & Time** or **Which One is Different?** Touch the activity or game on the screen with the stylus.



which word?

- Match the Word to the Picture
- Free Draw



Addition & Subtraction



weather & Time

- Weather Stampers
- Playing with Time
- Set the Clock
- Free Draw
- Clock Creator

 


which One is Different?



Which Word?

Free Draw

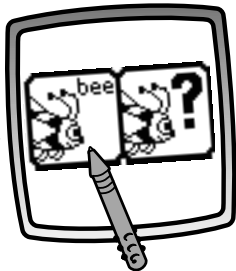


Which Word?

  
Choose **Free Draw** or **Which Word?**
Touch the screen with the stylus.


 




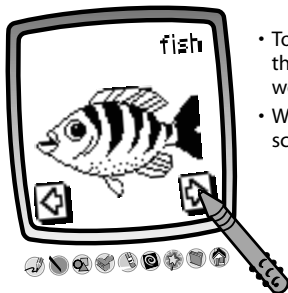

Free Draw

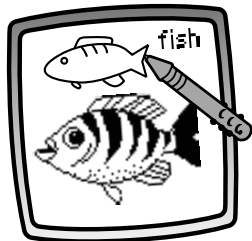

- Touch the arrows on the bottom of the screen with the stylus to view each word background.
- When you find one that you like, touch the screen with the stylus.



- Use any of these tools on the tool menu for drawing: "Pencil" Tool , Straight Line , Shape Maker , or Special Effects Selector .

 
Hint: When you finish your drawing, you can Erase It , Erase All ; Save It ; or touch Home  on the tool menu to return to the Home Screen.




which word?



- Look at the picture and the words in the upper right hand corner on the screen.
- Do you know which word matches the picture?

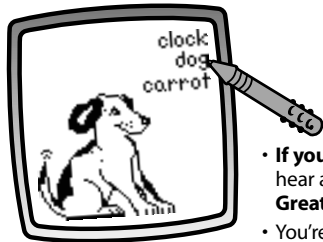

 - **If you touch the correct word**, you'll hear a sound effect and see an animation.
Great job!
- You're onto a new picture with three new words.

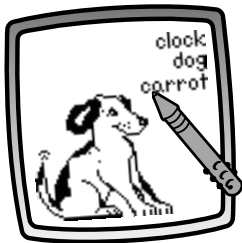

- **Oops, if you select the incorrect word,** you'll hear a sound effect. Try again.

Hint: After the third incorrect answer, the incorrect answers disappear leaving only the correct answer. A new picture appears with three words.



Addition & Subtraction



- Look at the screen and listen to the addition or subtraction question.
- Watch as objects pop up on the screen (or disappear) one by one. Count the objects.



 
Answer Box

- Next, you'll see the equation followed by an answer box.



Arrow Buttons

- Do you know the answer to the equation?
- Touch the arrow buttons on the screen with the stylus to scroll through answers in the answer box.

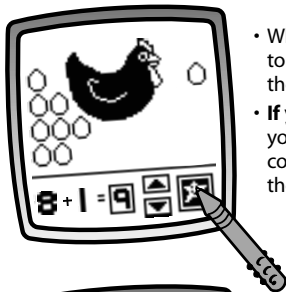

- When you see the answer in the box, touch the star box on the screen with the stylus.
- **If you answer the question correctly,** you'll see a fun animation and hear a cool sound effect. **Hooray!** You're onto the next question.



- **Oops, if you answer the question incorrectly,** you'll hear a tone. Choose another answer and touch the box next to it.

Hint: If the question is answered incorrectly three times, the correct answer is given. You're onto the next question.



Weather and Time

Weather Stampers



Time Activities

 
Choose **Weather Stampers** or **Time Activities**.
Touch the screen with the stylus.



 
weather Stampers




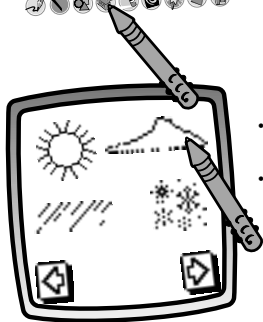 
- Listen to Dan talk about the weather.

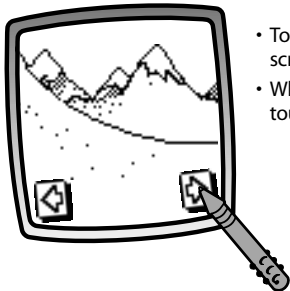

- Touch the arrows on the bottom of the screen with the stylus to view locations.
- When you find a location that you like, touch the screen with the stylus.

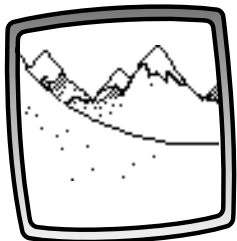


- Touch the Stamp It  tool on the tool menu to choose the weather, activities, people, etc. for your location.







- Touch the arrows on the bottom of the screen with the stylus for stamper choices.
- When you find one that you like, touch your choice on the screen with the stylus.

 


- You're back to your location. Touch the screen with the stylus to add your stamper choice.

Hint: You can choose more than one if you'd like! Simply touch the Stamp It  tool on the tool menu to make another choice and then return back to your location.



- Use any of the other tools on the tool menu to add to your location: "Pencil" , Straight Line , Shape Maker  or Special Effects Selector .

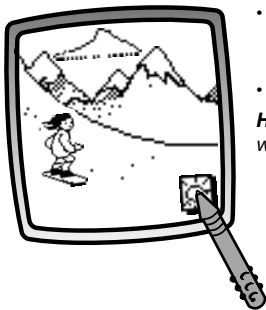

- Now, listen to the weather report. Touch the box on the lower right corner on the screen with the stylus.
- Dan gives the weather report.

Hint: Touch the box on the screen again with the stylus to hear more!



Time Activities

Choose any of the following activities: Playing with Time, Set the Clock, Free Draw or Clock Creator. Touch the screen with the stylus.

Playing with Time

Free Draw



Set the Clock

 
Clock Creator



Playing with Time

Analog

Digital

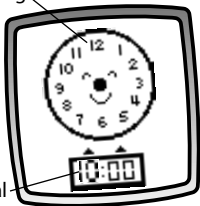

- You can play with the analog or digital clock.
- Touch the minute hand on the screen and drag it clockwise to the next half hour with the stylus.
- You'll hear the new time! (Watch the digital clock synchronize with the analog clock.)
- Touch the arrows on the screen with the stylus.
- You'll hear the new time! (Watch the analog clock synchronize with the digital clock.)



 
Set the Clock



- Watch as Pixter™ sets either the digital or analog clock. Now, it's your turn to set the other clock.




- **For the analog clock:** touch the minute hand on the screen and drag it clockwise to the time shown on the digital clock with the stylus.

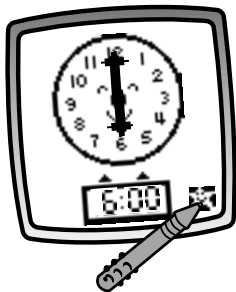


- When you are finished setting the analog clock, touch the star box in the lower right corner on the screen with the stylus.
- **If you set the clock correctly,** you'll hear a cool sound effect. **Way to go!** You'll be asked to set the clock again!
- **Oops, if you set the clock incorrectly,** you'll be asked to try again.

 Hint: if you set the clock incorrectly three times in a row, you'll automatically go back to the **Playing with Time** activity for more practice (see page 18).

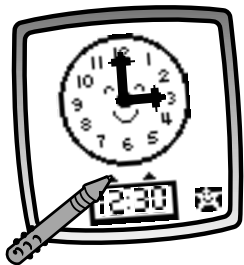

 
- **For the digital clock:** touch the arrows on the screen with the stylus to set the clock.

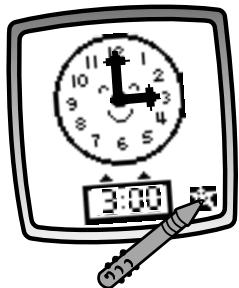

 - When you are finished setting the digital clock, touch the star box in the lower right corner on the screen with the stylus.
- **If you set the clock correctly,** you'll hear a cool sound effect. **Alright!** You'll be asked to set the clock again!
- **Oops, if you set the clock incorrectly,** you'll be asked to try again.




 


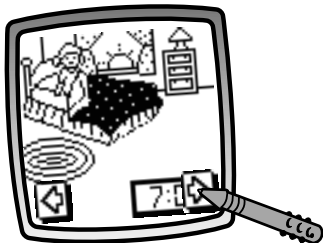
Free Draw



- Touch the arrows on the bottom of the screen with the stylus to view a time of day background.
- When you find one that you like, touch the screen with the stylus.

 


- Use any of the tools on the tool menu for drawing: "Pencil" Tool , Straight Line , Stamp It , Shape Maker , or Special Effects Selector .


Hint: When you finish your drawing, you can Erase It , Erase All ; Save It ; or touch Home  on the tool menu to return to the Home Screen.





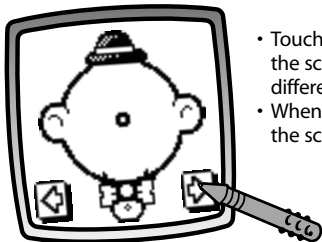


Clock Creator

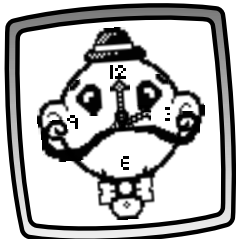 

- Touch the arrows on the bottom of the screen with the stylus to view different clocks.
- When you find one that you like, touch the screen with the stylus.



- Use any of the tools on the tool menu to decorate your clock: "Pencil" Tool , Straight Line , Shape Maker , Stamp It  or Special Effects Selector .

Hint: When you finish your drawing, you can Erase It ; Erase All ; Save It ; or touch Home  on the tool menu to return to the Home Screen.





Which One is Different?



- Choose a level of play. Touch the screen with the stylus.

 
Hint: Level 1 is for beginners – while Level 4 is for more advanced play.



- Watch, as four pictures pop up on the screen.




- Choose the picture that is different from the rest, by touching the screen with the stylus.

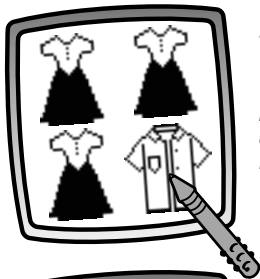

- **If you choose correctly**, you'll hear a cool sound effect. **Nice job!** You're onto the next question.

 ***Hint:** If you answer 10 questions in a row correctly, you'll automatically move up to the next level of play.*

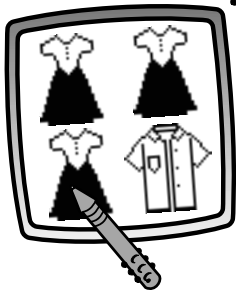

- **Oops, if you choose incorrectly**, you'll hear a sound effect. Choose another picture.

***Hint:** If you answer the question incorrectly three times in a row, you'll automatically drop down to the previous level of play.*



 
Tool Menu



"Pencil" Tool



Touch for freestyle drawing or writing.

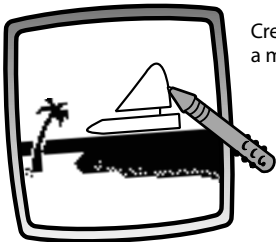


Create your own drawing or write a message with the stylus.




Straight Line



 Touch to make a straight line.

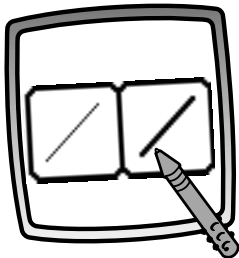

 Now, choose the line thickness for your "pencil" tool.

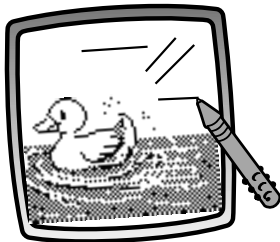

Touch the screen with the stylus. Now, drag the stylus on the screen and stop. Look – a straight line!

 
Hint: Make your own shapes or create your own connect-the-dots.



Shape Maker




Touch to make shapes.

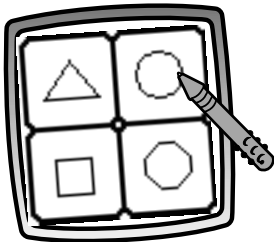

Now, choose the shape:

 - Triangle
- Circle
- Square/rectangle
- Make your own shape!

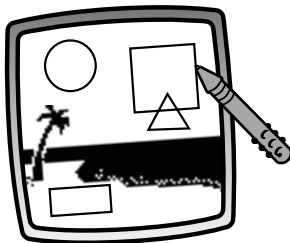

Touch the screen and drag the stylus to make small or large shapes.

 
Hint: To make a triangle, touch the screen and drag the stylus to make the base of the triangle. Then, touch the base line with the stylus and drag it to complete the triangle.




Stamp It!




Touch for stamper art.

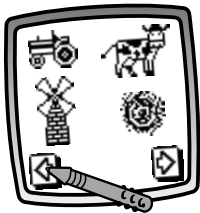

 
Touch the arrows on the bottom of the screen with the stylus to see each of the stamper designs.

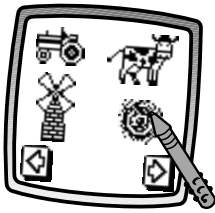

 Touch the screen with the stylus to choose a stamper.

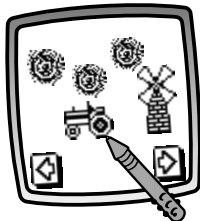

Touch the screen as many times as you like with the stylus for lots of stamper fun!

 
Hint: To choose more than one stamper, simply touch the Stamp It tool ; touch the arrows to scroll through the different stampers; and touch the screen with the stylus to choose a stamper and look – you're back to your drawing.




Eraser



Touch to make your stylus an eraser.

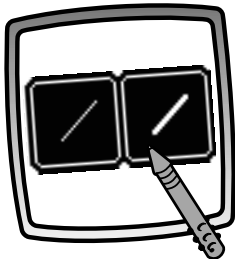

 Now, choose the line thickness for your eraser.

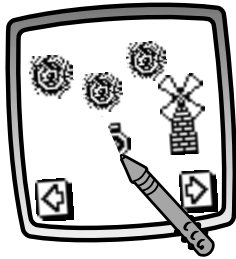


Use your stylus to erase any part of what's on the screen.



Full Screen Erase



 Touch to choose an animated full screen erase with cool sound effects.

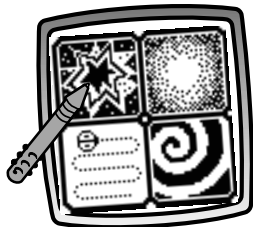

Choose: Explosion; Fade-away; Chomping; or Spin-out. Touch the screen with the stylus and watch and listen as your drawing disappears.



 
Hint: After using the full screen erase, you're still in the same activity using the same tool.



Special Effects Selector



Touch to choose a special effect.

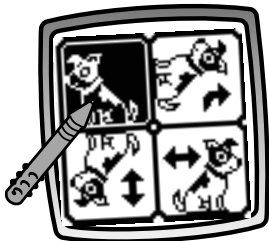

Rotate it, mirror it or switch from white to black or black to white.



 
Touch the screen with the stylus and watch your drawing change.






Save It! (and Adjust the Volume)

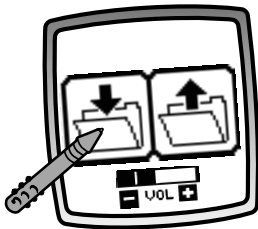

Touch to save or retrieve your drawing; or adjust the volume (at any time).



Touch **IN** file  to save; touch **OUT** file  to retrieve; touch Volume Control  to increase or decrease volume to a comfortable level.

Hints:

- You can save one picture at a time! Each time you save a picture, it replaces the one already there.
- After you save a picture, it will appear on your screen again. To make a new drawing, choose another activity/tool.



Home



 
Touch to go back to the Home Screen.






Choose an activity: Which Word?,
Addition & Subtraction, Weather & Time,
or Which One is Different?

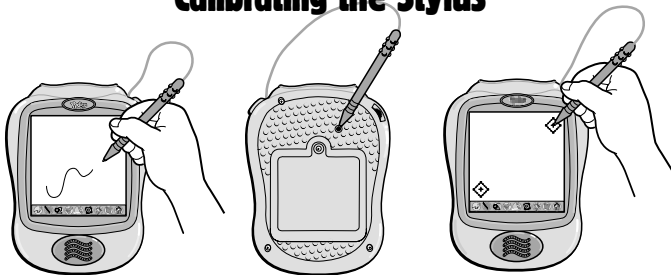

Calibrating the Stylus



IMPORTANT! The mark made on your screen from the stylus and the location of the tip of the stylus may not align. When this happens, you need to calibrate the stylus.

- Turn Pixter™ power on. Wait until you see the Home Screen.
- Turn Pixter over and locate the calibration hole.
- Insert, push and hold the stylus in the calibration hole. Turn Pixter over so that you can see the screen.
- When you see two , remove the stylus from the calibration hole.
- First touch the  in the upper right corner with the tip of the stylus.
- Then, touch the  in the lower left corner with the tip of the stylus.



Care

- Keep water, sand and dirt off of this cartridge.
- Keep this cartridge away from direct sunlight and excessive heat.
- Do not immerse the cartridge. Simply wipe the outside of the cartridge with a cloth to clean.
- This cartridge has no consumer serviceable parts. Please do not take this cartridge apart.



Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price®
Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For other countries outside the United States:

Canada: call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.



One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants Pixter™ Learning Fun™ 2 is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.





Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2002 Mattel, Inc. All Right Reserved. ® and ™ designate
U.S. trademarks of Mattel, Inc.

Printed in China.

73654pr-0920